

BELKIN

Conserve Socket™

Power Timer

 
User Guide

A device left plugged in but not in use can still draw power. The Conserve Socket Power Timer automatically shuts off power after the time interval you select—so you can save energy.

For more information and to learn about other Belkin Conserve energy management products, please go to belkin.com/consERVE


Package Contents

- Conserve Socket Power Timer
- User Guide and Warranty Information

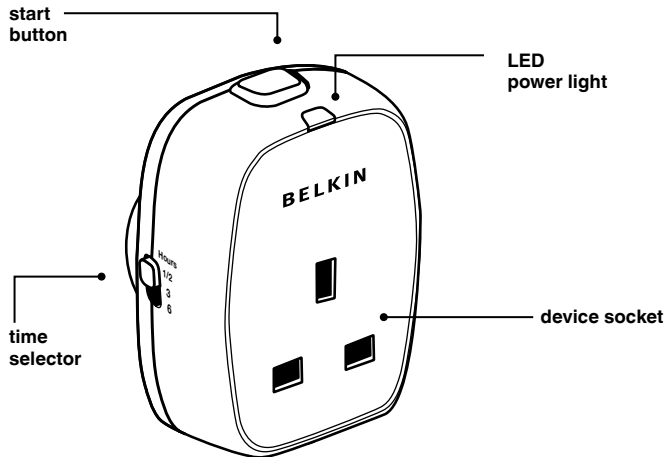

QUICK SETUP GUIDE

 - 1 Plug your Conserve Socket Power Timer into any standard power outlet or surge protector.

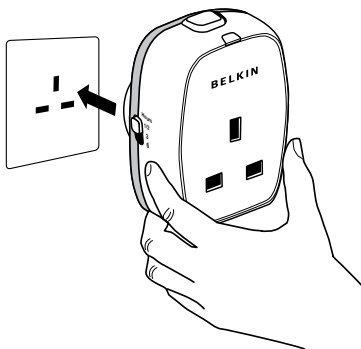


- 2 Plug any household device into the Conserve Socket.



- 3 Select your desired countdown time using the switch located on the left side of your Conserve Socket. Recommended countdown settings for the following devices:


- 30 mins: Hot-coil items – hair straighteners, clothes irons, soldering irons, toaster ovens, coffeemakers, fans
- 3 hours: Mobile Electronics Chargers – mobile phones, MP3 players, cameras
- 6 hours: Large Cordless Devices Chargers – handheld vacuum cleaners, cordless drills

 NOTE: You can change your countdown time setting at any time during operation.

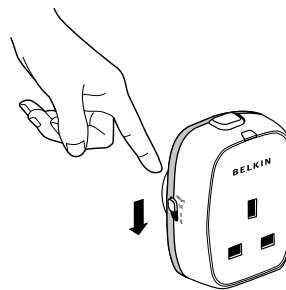

- 4 Push the start button on the top of your Conserve Socket. Once you've done this, the LED will illuminate green and power will flow to your attached device.

 NOTE: The start button does not turn off the Conserve Socket once the timer is activated. To turn off the timer immediately without waiting for the timer interval to elapse, unplug the Conserve Socket.

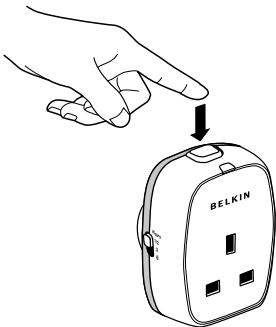

- 5 Once the countdown timer reaches zero, your Conserve Socket will power down and the LED will turn off.

NOTE: When sitting idle the Conserve Socket uses no power

PRODUCT FEATURES

- Zero power consumption when not in operation
- Timer selection switch – ½, 3, or 6 hours:
 - 30 mins for safety and power savings. This helps to limit the time that appliances may otherwise be left on indefinitely.
 - 3 and 6 hours for helping to make existing chargers more energy-efficient.
- Start push button
- Green LED light when Conserve Socket is active
- Standard power outlet compliant
- Low operating power consumption

TROUBLESHOOTING

When using Conserve Socket, my device does not fully charge.

Make sure you have selected an appropriate time period for the device you are trying to charge by referring to step 3 of the Quick Setup Guide, or simply increase the time period selected on the Conserve Socket.

When I press the start button a second time, the unit does not turn off.

The Conserve Socket cannot be manually turned off; you should wait for the countdown timer to finish, which will turn off the device. You can also turn off (reset) your Conserve Socket by unplugging it from the wall outlet.

Specifications

- Electrical Rating: 250V~/13A/50Hz/3250W
- Operating Power Consumption: <0.3W

Safety Information

- Important: Use indoors in a dry location.
- Contains not-user-serviceable parts; do not open.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- Belkin International, Inc. is not responsible for any interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate this equipment.

CE Statement

Note: This product complies with the essential requirements of the European Union R&TTE Directive 1999/5/EC, the Low Voltage Directive 2006/95/EC, and the EMC Directive 2004/108/EC. A copy of the European Union CE marking "Declaration of Conformity" may be obtained at the website: www.Belkin.Com/DOC

Your Belkin product contains a battery. For replacement please replace with the same type and size. Dispose of old batteries through a recycling center according to your national regulations.

Belkin International, Inc., Limited 2-Year Product Warranty

What this warranty covers:

Belkin International, Inc. ("Belkin") warrants to the original purchaser of this Belkin product that the product shall be free of defects in design, assembly, material, or workmanship.

What the period of coverage is:

Belkin warrants the Belkin product for two years.

What will we do to correct problems?

Product Warranty

Belkin will repair or replace, at its option, any defective product free of charge (except for shipping charges for the product). Belkin reserves the right to discontinue any of its products without notice, and disclaims any limited warranty to repair or replace any such discontinued products. In the event that Belkin is unable to repair or replace the product (for example, because it has been discontinued), Belkin will offer either a refund or a credit toward the purchase of another product from Belkin.com in an amount equal to the purchase price of the product as evidenced on the original purchase receipt as discounted by its natural use.

What is not covered by this warranty?

All above warranties are null and void if the Belkin Conserve Socket is not provided to Belkin International, Inc., for inspection upon Belkin's request at the sole expense of the purchaser, or if Belkin International, Inc., determines that the Belkin Conserve Socket has been improperly installed, altered in any way, or tampered with. The Belkin Conserve

Socket Warranty does not protect against acts of God (including but not limited to flood, earthquake, war, and vandalism), theft, normal-use wear and tear, erosion, depletion, obsolescence, abuse, or alteration.

THIS WARRANTY CONTAINS THE SOLE WARRANTY OF BELKIN. THERE ARE NO OTHER WARRANTIES, EXPRESSED OR, EXCEPT AS REQUIRED BY LAW, IMPLIED, INCLUDING THE IMPLIED WARRANTY OR CONDITION OF QUALITY, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, AND SUCH IMPLIED WARRANTIES, IF ANY, ARE LIMITED IN DURATION TO THE TERM OF THIS WARRANTY.

IN NO EVENT SHALL BELKIN BE LIABLE FOR INCIDENTAL, SPECIAL, DIRECT, INDIRECT, CONSEQUENTIAL OR MULTIPLE DAMAGES SUCH AS, BUT NOT LIMITED TO, LOST BUSINESS OR PROFITS ARISING OUT OF THE SALE OR USE OF ANY BELKIN PRODUCT, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

This warranty gives you specific legal rights, and you may also have other rights, which may vary from jurisdiction to jurisdiction. Some jurisdictions do not allow the exclusion or limitation of incidental, consequential, or other damages, so the above limitations may not apply to you.

BELKIN.

Belkin Tech Support

<http://www.belkin.com/support>

For more information and to learn about other Belkin Conserve energy management products, please go to belkin.com/conserve

8820uk00549
F7C009



Use Energy Wisely

Using electricity or driving a car does have an effect on the environment, but by using energy wisely we can prevent waste and reduce carbon dioxide (CO₂) emissions.

CO₂ is a greenhouse gas that accumulates in the Earth's atmosphere, trapping heat from the sun and keeping the planet warm. CO₂ comes, in part, from the burning of fossil fuels, such as coal and gasoline, to generate electricity for use in our homes and to power our cars.

The amount of CO₂ in our atmosphere has increased over the past century, and the majority of scientists questioned in a recent international study agree that global temperatures have risen dramatically compared with levels from the 1800s, with human activity being a significant contributing factor. According to the International Energy Agency, a warmer Earth may lead to changes in rainfall patterns, a rise in sea level, and a wide range of impacts on plants, wildlife, and humans.

A good way to visualize CO₂ is to imagine that 1kg of CO₂ would fill up 1566 soda cans (0,35l), or a box 0,8m high, 0,8m wide and 0,8m deep

Belkin Conserve products can help you do your part to use energy wisely.

Use Less, Save More, Feel Good.

Facts gathered from a study conducted by the University of Illinois, the International Energy Agency, and the U.S. Environmental Protection Agency.