

Quick Reference Guide for  
Belkin MediaBoard™  
Guide de référence rapide –  
clavier MediaBoard™ Belkin  
Guía de referencia rápida para  
el MediaBoard™ de Belkin  
Guia de referência rápida para  
o MediaBoard™ da Belkin

En

Ca

Es

Po

P73104

F8E211  
F8E211-USB

## Table of Contents

**English** ..... 1

**Français (Canada)** ..... 9

**Español** ..... 17

**Português** ..... 25

En

Ca

Es

Po

## Introduction

En

Congratulations on your purchase of the Belkin MediaBoard™. You have taken the next step in smart computer usage. With the MediaBoard™ Hot keys, controlling your CD-ROM and browsing the Internet is only the touch of a button away. And, of the 23 Hot keys, 10 are programmable so that you can modify your keyboard to fit your personal needs.

## Software Installation

### Installation of MediaBoard™ Program Software:

1. Insert the program Diskette 1 into your 3.5" drive. Choose "Run" from the "Start" menu.
2. In the "Run" window, type "A:\Setup" and click "OK."
3. The setup program will start. At the "Welcome" window, once you have read the information, click on "Next."
4. The program will setup the driver automatically for you. When prompted, insert Diskette 2 and click "OK."
5. After finishing the installation, you will be requested to restart your computer. Remove the diskette from the 3.5" drive.
6. Click on "Yes, I want to restart my computer now."
7. Click "OK."

### Using the MediaBoard™ Hot keys

There are 23 Hot keys which provide easy access to a number of functions and applications. The following definitions correspond to your keyboard icons:

	Menu	Activates the MediaBoard™ menu that allows you to configure the 10 programmable Hot keys to perform specific functions or launch other applications
	ZZZ	Puts system into suspend mode (Windows NT® does not support this function)
	Coffee Break	Puts system into screen saver mode
	Calculator	Displays your calculator application
	Xfer	Transfers the amount on the calculator to Worksheet
	Vol Up	Increases the volume
	Vol Down	Decreases the volume
	Mute	Mutes the master volume output. Press the button again to resume volume.
	Scroll Up	Scrolls up the worksheet or web site
	Scroll Down	Scrolls down the worksheet or web site
	Play/Pause*	Begins playing or pauses the CD or DVD disk

## Software Installation (continued)

	Wake	Wakes system up from Sleep mode
	Sleep	Turns on Sleep mode
	Power	Powers off whole system
	Stop/Eject*	Stops playing the current track or ejects the CD from the CD-ROM
	Forward*	Goes to the next track of your CD or DVD disk
	Rewind*	Goes to the beginning of the current track or to the previous track of your CD or DVD disk
	Record*	Records from an assigned source, such as a CD
	Internet*	Launches your Internet program
	Back*	Takes you back to the previous Internet page
	SRCH*	Allows you to search for something on the Internet
	Stop*	Stops loading web site
	Next*	Goes forward to next Internet page

\*These Hot keys are programmable.

## Programming the Hot keys

En

Once the MediaBoard™ software has been installed and your computer has been rebooted, an icon will appear in the lower right panel of your screen that resembles a single keyboard key. Place your mouse pointer on this icon and click the right button of your mouse. This will bring up a menu. Move your pointer to Multimedia Keyboard and hold it there for a second. Another menu will appear. Move your pointer to Configure Button and click the left button of your mouse. The menu will disappear.

Now place your pointer back on the icon in the lower right panel and click the left button of your mouse. This will bring up a picture of the right side of your MediaBoard™.

If you click on any of the Hot keys buttons in the picture, the customization window will appear. You can choose to disable the buttons so that they will not function when pressed. You can choose a pre-defined function from the menu or you can choose to attach it to a file or program.

For more details, click the "Help" button.

## Information

### FCC Statement

#### DECLARATION OF CONFORMITY WITH FCC RULES FOR ELECTROMAGNETIC COMPATIBILITY

We, Belkin Components, of 501 West Walnut Street, Compton CA 90220,  
declare under our sole responsibility that the product:

F8E211/F8E211-USB

to which this declaration relates:

Complies with Part 15 of the FCC Rules. Operation is subject to the following  
two conditions: (1) this device may not cause harmful interference, and (2) this  
device must accept any interference received, including interference that may  
cause undesired operation.

### CE Declaration of Conformity

We, Belkin Components, declare under our sole responsibility that the F8E211/F8E211-USB,  
to which this declaration relates, is in conformity with Generic Emissions Standard EN50081-  
1 and with Generic Immunity Standard EN50082-1 1992.

### Belkin Components Limited Lifetime Product Warranty

Belkin Components warrants this product against defects in materials and workmanship for  
its lifetime. If a defect is discovered, Belkin will, at its option, repair or replace the product at  
no charge provided it is returned during the warranty period, with transportation charges  
prepaid, to the authorized Belkin dealer from whom you purchased the product. Proof of  
purchase may be required.

This warranty does not apply if the product has been damaged by accident, abuse, misuse,  
or misapplication; if the product has been modified without the written permission of Belkin;  
or if any Belkin serial number has been removed or defaced.

THE WARRANTY AND REMEDIES SET FORTH ABOVE ARE EXCLUSIVE IN LIEU OF ALL OTHERS,  
WHETHER ORAL OR WRITTEN, EXPRESSED OR IMPLIED. BELKIN SPECIFICALLY DISCLAIMS  
ANY AND ALL IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, WARRANTIES OF  
MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

No Belkin dealer, agent, or employee is authorized to make any modification, extension, or  
addition to this warranty.

BELKIN IS NOT RESPONSIBLE FOR SPECIAL, INCIDENTAL, OR CONSEQUENTIAL  
DAMAGES RESULTING FROM ANY BREACH OF WARRANTY, OR UNDER ANY OTHER  
LEGAL THEORY, INCLUDING BUT NOT LIMITED TO LOST PROFITS, DOWNTIME,  
GOODWILL, DAMAGE TO OR REPROGRAMMING, OR REPRODUCING ANY PROGRAM  
OR DATA STORED IN OR USED WITH BELKIN PRODUCTS.

Some states do not allow the exclusion or limitation of incidental or consequential damages  
or exclusions of implied warranties, so the above limitations of exclusions may not apply to  
you. This warranty gives you specific legal rights, and you may also have other rights that  
vary from state to state.



[belkin.com](http://belkin.com)

***Belkin Components***

501 West Walnut Street  
Compton • CA • 90220 • USA  
Tel: 310.898.1100  
Fax: 310.898.1111

***Belkin Components, Ltd.***

Unit 13 • Gatelodge Close • Round Spinney  
Northampton • Northants • NN3 8RX • UK  
Tel: +44 (0) 1604678300  
Fax: +44 (0) 1604678330

***Belkin Components B.V.***

Diamantlaan 8 • 2132 WV  
Hoofddorp • The Netherlands  
Tel: +31 (0) 235698765  
Fax: +31 (0) 235612694

© 2000 Belkin Components. All rights reserved.  
All trade names are registered trademarks of respective manufacturers listed.