

BELKIN.

Bluetooth[®]

MUSIC RECEIVER

User Manual

F8Z492 8820tt00264

TABLE OF CONTENTS

Table of Contents	SECTIONS	1	2	3	4	5	6
1 Introduction		1					
2 Setting Up Your <i>Bluetooth</i> Music Receiver		2					
3 Pairing Your <i>Bluetooth</i> Music Receiver		3					
Reconnecting Your Device.....		5					
Changing Connected Device.....		6					
Out of Range or Lost Signal.....		6					
			4 Troubleshooting				7
			5 Safety Warnings				8
			6 Information				9
			FCC Statement				9
			Warranty				10

INTRODUCTION

Table of Contents

SECTIONS

1

2

3

4

5

6

Features

- Play your iPhone, iPod touch, or other device enabled with *Bluetooth* technology wirelessly through your home stereo
- Control your music directly from your iPhone or iPod touch
- Connect a device without ever going near the stereo
- *Bluetooth* connection has a 30 ft. range for virtually unlimited wireless listening in your home

What's in the Box



Power
Adapter



3.5mm - 3.5mm
stereo cable



3.5mm - RCA
stereo cable



Bluetooth Music
Receiver

SETTING UP YOUR *BLUETOOTH* MUSIC RECEIVER

Table of Contents

SECTIONS

1

2


3

4

5

6

1. Connect one 3.5mm end of the included audio cable to the headphone jack of the *Bluetooth* Music Receiver.
2. Connect the other end (3.5mm or 2xRCA) to an audio input on your home stereo system. Consult your stereo system's manual for more information on how to accomplish this.
3. Connect the AC power adapter cable to the *Bluetooth* Music Receiver's DC input jack, and plug the AC adapter into a wall power outlet.
4. The blue LED light will flash once to indicate the unit is powered and is now ready to be paired to your iPhone or iPod touch.

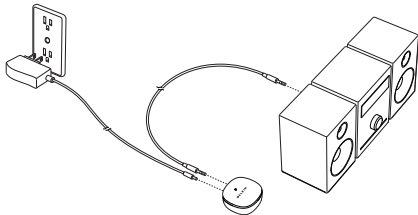

PAIRING YOUR *BLUETOOTH* MUSIC RECEIVER

Table of Contents

SECTIONS

1

2

3

4

5

6


1. Go to the *Bluetooth* Manager of your iPhone or iPod touch by following these steps:



- a. From your iPhone/iPod touch home page, tap "Settings".



- b. Inside Settings, tap on "General".

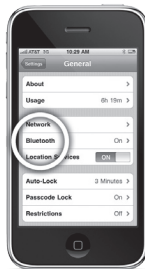

- c. Inside General, tap on "Bluetooth".

PAIRING YOUR *BLUETOOTH* MUSIC RECEIVER

Table of Contents

SECTIONS

1

2

3

4

5

6

2. Search *Bluetooth* devices and click on “Belkin YXX” (e.g., Belkin A58) where:

- Y = a letter (A, B, C, etc.)
- X = a number (00, 01, 02, etc.)

This is the device ID and is also printed on the bottom of the *Bluetooth* Music Receiver for easy reference.



3. Enter “0000” when the player asks for the PIN code. This will allow the iPhone to pair with the *Bluetooth* Music Receiver.

4. Once paired, the blue LED light on the *Bluetooth* Music Receiver will flash once. The blue LED light will stay on when a connection is established.

Some devices, such as the iPhone, will connect immediately after pairing so the LED will stay on. Other devices, such as laptops, may ask you if you wish to connect and the LED will go off after pairing until a connection is established.

Although the *Bluetooth* Music Receiver can only play music from one device at a time, it is capable of being paired to up to eight devices. This means that you only have to enter the PIN code one time for each device.

Your *Bluetooth* Music Receiver is now connected and ready to play music! Just play music on your device as you normally would and the sound will come out of your stereo speakers!

Keep in mind that the *Bluetooth* Music Receiver has a 30-foot range.

Reconnecting Your Device

If you move out of range or turn off the *Bluetooth* feature on your iPhone or iPod touch, the *Bluetooth* Music Receiver will disconnect from your device. To reconnect, simply access the *Bluetooth* Manager on your device and select the appropriate Belkin YXX device listed. You will not be asked to enter the PIN code again.

Changing Connected Device

If you want to switch from one device to another, follow these steps:

1. End the existing *Bluetooth* connection with the connected device. Access the *Bluetooth* Manager and disable the *Bluetooth* function of the iPhone or iPod touch.
2. The *Bluetooth* Music Receiver can now be connected to a different iPhone or iPod touch.
3. Follow the directions in “Pairing Your *Bluetooth* Music Receiver” to connect a different device.

Out of Range or Lost Signal

If the music device is out of range (beyond 30 feet) of the *Bluetooth* Music Receiver or if there is something blocking the *Bluetooth* signal, the LED light will turn off to indicate that the *Bluetooth* connection with the music device has been lost. To avoid a lost connection:

1. Move the music device back into range (within 30 feet), and/or make sure there's a clear line of sight and that there are no obstructions between the Receiver and the iPhone or iPod touch.
2. Within 15 seconds, the connection will automatically be reestablished and the blue LED light will turn on.
3. If the connection is lost for more than 15 seconds, the connection will need to be reestablished. Follow the directions in “Reconnecting Your Device”.

TROUBLESHOOTING

You can quickly solve most problems with your *Bluetooth* Music Receiver by following the advice in this section.

My music is not coming out of the stereo speakers.

Solutions:

- Make sure the *Bluetooth* Music Receiver is powered.
- Make sure an audio cable is correctly and firmly connected to the *Bluetooth* Music Receiver.
- Make sure one of the two supplied audio cables is correctly and firmly connected to the Receiver and the stereo.
- Make sure the Receiver is powered.
- Make sure the stereo volume is set to a comfortable listening level.
- Make sure you are within range of the Receiver, and that your iPhone or iPod touch is connected via *Bluetooth* technology with the Receiver.

SAFETY WARNINGS

Table of Contents

SECTIONS

1

2

3

4

5

6

Your *Bluetooth* Music Receiver requires full concentration and both hands to install.

Do not use this apparatus near water (for example, a bath tub, wash bowl, kitchen sink, laundry tub, wet basement, swimming pool, or other areas located near water).

Clean only with a dry cloth. Unplug this product from the wall outlet before cleaning.

Do not install near any heat sources such as stoves or other apparatus (including amplifiers) that produce heat.

Protect the power cord from being walked on or pinched, particularly at the plugs, convenience receptacles, and the point where they exit the apparatus.

Only use attachments/accessories specified by the manufacturer.

Unplug this apparatus when unused for long periods of time.

Belkin does not assume any responsibility for personal injury or property damage incurred due to interaction with the *Bluetooth* Music Receiver, iPhone, or iPod.

INFORMATION

FCC Statement

This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Belkin International, Inc., is not responsible for any interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate this equipment.

Belkin International, Inc., Limited 1-Year Product Warranty

What this warranty covers.

Belkin International, Inc. ("Belkin") warrants to the original purchaser of this Belkin product that the product shall be free of defects in design, assembly, material, or workmanship.

What the period of coverage is.

Belkin warrants the Belkin product for one year.

What will we do to correct problems?

Product Warranty.

Belkin will repair or replace, at its option, any defective product free of charge (except for shipping charges for the product). Belkin reserves the right to discontinue any of its products without notice, and disclaims any limited warranty to repair or replace any such discontinued products. In the event that Belkin is unable to repair or replace the product (for example, because it has been discontinued), Belkin will offer either a refund or a credit toward the purchase of another product from Belkin.com in an amount equal to the purchase price of the product as evidenced on the original purchase receipt as discounted by its natural use.

What is not covered by this warranty?

All above warranties are null and void if the Belkin product is not provided to Belkin for inspection upon Belkin's request at the sole expense of the purchaser, or if Belkin determines that the Belkin product has been improperly installed, altered in any way, or tampered with. The Belkin Product Warranty does not protect against acts of God such as flood, lightning, earthquake, war, vandalism, theft, normal-use wear and tear, erosion, depletion, obsolescence, abuse, damage due to low voltage disturbances (i.e. brownouts or sags), non-authorized program, or system equipment modification or alteration.

How to get service.

To get service for your Belkin product you must take the following steps:

1. Contact Belkin International, Inc., at 501 W. Walnut St., Compton, CA 90220, Attn: Customer Service, or call (800)-223-5546, within 15 days of the Occurrence. Be prepared to provide the following information:
 - a. The part number of the Belkin product.
 - b. Where you purchased the product.
 - c. When you purchased the product.
 - d. Copy of original receipt.

2. Your Belkin Customer Service Representative will then instruct you on how to forward your receipt and Belkin product and how to proceed with your claim.

Belkin reserves the right to review the damaged Belkin product. All costs of shipping the Belkin product to Belkin for inspection shall be borne solely by the purchaser. If Belkin determines, in its sole discretion, that it is impractical to ship the damaged equipment to Belkin, Belkin may designate, in its sole discretion, an equipment repair facility to inspect and estimate the cost to repair such equipment. The cost, if any, of shipping the equipment to and from such repair facility and of such estimate shall be borne solely by the purchaser. Damaged equipment must remain available for inspection until the claim is finalized. Whenever claims are settled, Belkin reserves the right to be subrogated under any existing insurance policies the purchaser may have.

How state law relates to the warranty.

THIS WARRANTY CONTAINS THE SOLE WARRANTY OF BELKIN. THERE ARE NO OTHER WARRANTIES, EXPRESSED OR, EXCEPT AS REQUIRED BY LAW, IMPLIED, INCLUDING THE IMPLIED WARRANTY OR CONDITION OF QUALITY, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, AND SUCH IMPLIED WARRANTIES, IF ANY, ARE LIMITED IN DURATION TO THE TERM OF THIS WARRANTY.

Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

IN NO EVENT SHALL BELKIN BE LIABLE FOR INCIDENTAL, SPECIAL, DIRECT, INDIRECT, CONSEQUENTIAL OR MULTIPLE DAMAGES SUCH AS, BUT NOT LIMITED TO, LOST BUSINESS OR PROFITS ARISING OUT OF THE SALE OR USE OF ANY BELKIN PRODUCT, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

This warranty gives you specific legal rights, and you may also have other rights, which may vary from state to state. Some states do not allow the exclusion or limitation of incidental, consequential, or other damages, so the above limitations may not apply to you.

belkin.com

Belkin Tech Support
US: 800-223-5546, ext. 2263
310-898-1100, ext. 2263
UK: 0845 607 77 87
Australia: 1800 235 546
New Zealand: 0800 235 546
Singapore: 65 64857649
Europe: www.belkin.com/support

Belkin International, Inc.
501 West Walnut Street
Los Angeles, CA 90220, USA
310-898-1100
310-898-1111 fax

Belkin Ltd.
Express Business Park, Shipton Way
Rushden, NN10 6GL,
United Kingdom
+44 (0) 1933 35 2000
+44 (0) 1933 31 2000 fax

Belkin B.V.
Boeing Avenue 333
1119 PH Schiphol-Rijk,
The Netherlands
+31 (0) 20 654 7300
+31 (0) 20 654 7349 fax

Belkin Ltd.
4 Pioneer Avenue
Tuggerah Business Park
Tuggerah, NSW 2259, Australia
+61 (0) 2 4350 4600
+61 (0) 2 4350 4700 fax

© 2009 Belkin International, Inc. All rights reserved. All trade names are registered trademarks of respective manufacturers listed. iPod, iPhone, and iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries. The *Bluetooth* name and the *Bluetooth* trademarks are owned by *Bluetooth SIG, Inc.*, and are used by Belkin International, Inc., under license.