

BELKIN®

Wi-Fi® Phone for Skype™



User Manual

F1PP000GN-SK

Table of Contents

1. Introduction	1
Package Checklist	1
Hardware Description	1
AC Power Charger	2
2. Installing the Battery	3
3. Charging the Battery	4
4. Powering On the Phone	5
5. Getting Started.	6
6. Contacts	15
7. Make and Receive Calls	22
8. Connect to Networks	29
9. Personal Settings.	34
10. General Settings.	42
11. Appendix A: Specifications	47
12. Compliances	49

Introduction

The Wi-Fi Phone for Skype (the phone) enables you to use your normal Skype account to make Skype calls without using a computer. This affords you complete mobility, allowing you to talk from any location from which you have an Internet connection through an access point.


Package Checklist

The phone package includes these items:

- One Wi-Fi Phone for Skype (F1PP000GN-SK)
- One Lithium-Ion Battery
- One AC Power Charger
- Quick Start Guide
- User Guide CD

Hardware Description

Before preparing the phone for use, first become familiar with its main keys, buttons, and other hardware features.

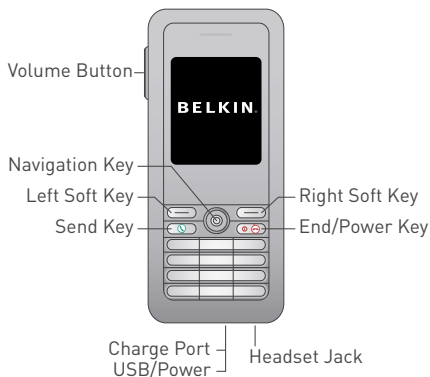

Introduction

1. Navigation Key—Four-direction user-interface navigation key.
2. Right Soft Key—Selects the option at the bottom right corner of the screen.
3. End/Power Key—Ends an active call.
 - In OFF mode, turns the power on when held more than 2 seconds.
 - In ON mode, turns the phone off when held for more than 4 seconds.
 - In ON, press for two seconds to access the power-key menu.
4. Headset Jack—Jack for a headset connection (2.5mm mono/mic).
5. USB/Power Charge Port—Power-charger connection for charging the battery.
6. Alphanumeric Keypad—Includes 0–9, A–Z, *, and # keys.
 - The [a/A *] key selects upper- or lowercase characters, numbers, or hexadecimal characters.
 - The [1] key selects common punctuation marks during text input.
 - The [#] key selects special characters and symbols during text input.
7. Send Key—Calls a selected contact.
8. Left Soft Key—Selects the option at the bottom left corner of the screen.
9. Volume Button—Adjusts volume of the speaker.


AC Power Charger

The phone charges its installed battery when connected to the AC power charger, when the charger is connected to a power source such as a wall outlet. The power charger automatically adjusts to any voltage between 100–240 volts at 50 or 60 hertz. No voltage-range settings are required.

Installing the Battery

After unpacking the phone, install and charge the battery pack before turning on the phone.

- 1. Remove Battery-Compartment Cover**—Place the phone face down. Push and slide down the battery-compartment cover until it becomes free.
- 2. Install Battery**—Place the battery into the compartment. Be sure the text label on the battery is facing out and the battery's three metal contacts point to the top of the phone.

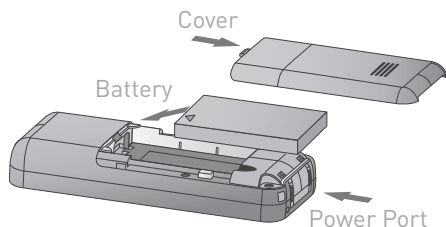

- 3. Replace Battery-Compartment Cover**—Slide the battery-compartment cover back onto the phone until it clicks firmly into place.

Notes:

- Use only the lithium-ion battery pack supplied with the phone.
- Do not try to install any other battery.
- To obtain replacement batteries, please purchase replacement lithium-ion battery model: NP-60, used for digital cameras/camcorders made by Fujifilm®, Pentax®, and Panasonic®.

Charging the Battery

- 1. Connect the AC Power Charger**—Lift up the rubber cover on the mini-USB charger port and connect the power charger to the port. Then, plug the charger into an AC electrical outlet.
- 2. Fully Charge Battery**—For first-time use, allow three hours to fully charge the battery before turning on the phone.
- 3. Disconnect the Power Charger**—When the battery is fully charged, remove the power charger from the phone and push down the charger port's rubber cover.

Notes:

- The power charger automatically adjusts to any voltage between 100–240 volts at 50 or 60 hertz.
- When you next have to charge the phone's battery, you do not have to power off the phone. Just connect the charger as described above and wait until the LCD display indicates the battery is fully charged.

1

2

3

4

5

6

7

8

9

10

11

12

section

Powering On the Phone

Push and hold “End/Power” for more than two seconds to power on the phone. The LCD display turns on showing the Belkin logo. Allow 30 seconds for the phone to start up. Go to the “Getting Started” section to learn how to set up a Wi-Fi-network connection and start using the phone.



1. Getting Started

The phone requires a wireless connection to a Wi-Fi access point in order to make Skype calls.

You can configure the phone to connect to specific wireless networks or search for “open” networks. Wireless-network information is stored in the phone’s memory as “Preferred Networks”. These are searched for each time the phone is powered on.


When powering on the phone for the first time, there are no Preferred Networks in the phone’s memory. You need to select a wireless network and sign in to your Skype account before you can start making calls.

1.1 First-Time Startup

You must complete the following steps the first time you use your phone.



1. Select a language.



2. Read and accept the Skype Agreement.
Be sure to scroll down and read the entire agreement before accepting.

1

2

3

4

5

6

7

8

9

10

11

12

1.2 Connect to a Network

After you have selected a language and accepted the Skype agreement, your phone searches for available networks. This also occurs whenever you power on the phone.



1. The Phone scans for available wireless networks.



2. Select a network.

Notes:

- If a network requires a security key, the phone prompts you for the key.
- Use the *a/A button to change to lowercase, uppercase, or numeric entry when entering a network key.
- The access-key information is stored in the phone's memory as a "Preferred Network" and will be used the next time the phone is powered on.
- Normally, you need to be within 300 feet (90m) of the wireless access point to connect successfully.

1.3 Create a New Skype Account

1

2

3

4

5 section

6

7

8

9

10

11

12

After you have successfully accessed a wireless network, you can sign in to Skype. If you do not have an existing Skype account, then:



1. Create a new account.



2. Create a Skype name.



3. Create a password.



4. Sign in.

Notes:


- Use the *a/A button to change to lowercase, uppercase, or numeric entry when entering your Skype name and password.
- Skype names can be 6–30 characters. You can use any mix of upper- and lowercase characters, numbers, and punctuation marks. You cannot use spaces or start your name with a number or punctuation mark. If the name is already in use, you will be prompted to try another name.

Getting Started

- Passwords can be 4–20 characters. You can use any mix of upper- and lowercase characters, numbers, and punctuation marks. You cannot use spaces, start your name with a number or punctuation mark, or use your Skype name as a password.

1.4 Sign In to Skype

When you have a Skype account, you can sign in to Skype.



1. Sign in to Skype.



2. Enter your Skype name.



3. Enter your password.

Notes:

- Use the *a/A button to change to lowercase, uppercase, or numeric entry when entering your password.
- You can choose to automatically sign in with your Skype name and password on subsequent sign-ins.
- On initial startup, it may take a few minutes to upload a large Contact list.

1.5 Skype Features

After you have created your Skype account, you can call other people with Skype accounts for free. Skype also offers additional features, including:

SkypeOut™	SkypeOut allows you to place calls to traditional landline and mobile phones.
SkypeIn™	SkypeIn is a subscription feature that provides you with a traditional phone number for receiving Skype calls on your phone from traditional landlines and mobile phones.
Skype Voicemail™	Skype Voicemail™ allows you to send and receive voicemail messages and record a greeting.

All of these features are available at www.skype.com.

1

2

3

4

5

6

7

8

9

10

11

12























section

1.6 LCD Display

The phone's LCD display provides various status indicators and access to the menu-based interface. The illustration below shows the main screen and its elements.



Getting Started

Wireless-Signal Status	Indicates the strength of the wireless-network signal.  No detectable signal  Weak wireless signal  Good wireless signal  Strong wireless signal
Battery Status	Indicates the status of the battery.  Low level  Partially charged  Fully charged  Charging
Notifications	Displays notification icons.  Missed call  New voicemail  Authorization request  Silent mode is active  Keypad locked  Skype credit is close to expiry  Headset attached
Skype Online Status	Indicates your current Skype online status.  Online  Offline (not signed in)  Do not Disturb. Indicates you are busy.  Skype Me. Available for calls from anyone.  Invisible. Still online, but unseen by others.  Away. Away for a while.  Not available. Not available for calls.
Current Time	The currently set time.
Skype Credit	Your current Skype-credit balance.
Left Soft Key Action	The action that happens when you press the left soft key. Typically, the left soft key selects the current menu item or confirms a setting. From the main screen, it provides access to the user menu.
Right Soft Key Action	The action that happens when you press the right soft key. Typically, the right soft key cancels the last action or returns to the previous screen. From the main screen, it provides access to your list of contacts once signed in.

1.7 Main Menu

The main menu provides easy access to all of your Skype and phone settings. The menus are easy to navigate using the 4-way navigation key. Just move the navigation key up or down to highlight a menu item, then push down on the key to select the item.

The following table outlines the main-menu items.

Connect (Shown when not connected to a network)	Allows you to connect to a network.
Sign In (Shown when not connected to a network)	Allows you to sign in to Skype.
Contacts	Lists your contacts and their current Skype status once you are signed in.
History	Lists your missed calls, incoming and outgoing calls, voicemail, and authorizations.
Status	Displays your Skype connection status.
Add contact	Adds a Skype or SkypeOut number to your Contact list.
Search	Allows user to search for a particular Skype account using either Skype name or email address.
Services	Sets up Skype credit, SkypeIn, and voicemail.
Settings	Provides access to Skype, wireless network, and phone settings that can be viewed or changed.

Note:

- When you are not connected to Skype or to an access point, the only menu option is “Settings”. “Connect/Sign In” is the “Right Soft Key” option when you are not connected

1.8 Power-Key Menu

1

2

3

4

5

section

6

7

8

9

10

11

12

Access the power-key menu by pressing “End/Power” for more than two seconds and then releasing it. Be sure not to press the key for more than four seconds—this immediately switches the phone OFF.

The items listed in the power-key menu depend on your current network connection and Skype sign-in status. If you are not connected to a network and not signed in to Skype, only a few menu items are displayed. If you are connected and signed in, all of the items are displayed.

The following table outlines the main-menu items.

Sign In (Shown when not connected to a network)	Allows you to connect to a network and sign in to Skype.
Switch off	Powers off the phone.
Silent	Sets the ringtone volume to off.
Change Status	Allows user to change the login status.
My profile	Allows you to change your Skype-profile information.
Sign In/Out	Signs in or out of Skype.
Find/View Networks	Displays a list of detected wireless networks.
Network Status	Displays wireless-network-connection information.



2. Contacts

Your Contact list displays all of the names to which you can make calls. If you have an existing Skype account, your Contact list is automatically downloaded when you sign in. If you are new to Skype and have just created an account, your Contact list will be empty. You will need to add contacts to your list.

Skype protects the privacy of users by requiring authorization on names that you wish to add to your Contact list. When you add a name to your list, an authorization request is sent to the user. The user can accept or deny the request. When a request is accepted, you can see when the contact is online and make calls to him or her. You can also view his or her personal-profile details.

2.1 Add a Skype Contact

To add a Skype contact, select “Menu”, then:



1. Select “Add Contact”.



2. Select “Skype”.



3. Enter the Skype name or full name.



4. Select “OK”.

Note:

- After you select “OK” in step 4, an authorization request is sent to the contact. When it has been sent, a confirmation message is displayed. The name is added to your Contact list, but is grayed out, pending authorization by the contact.

1

2

3

4

5

6

section

7

8

9


10

11

12

2.2 Add a SkypeOut Contact

To add a SkypeOut contact, select "Menu", then:




1. Select "Add Contact".



2. Select "SkypeOut number".



3. Enter contact's name.



4. Enter full phone number.




5. The number is added to your contact list.

Contacts

Notes:

- SkypeOut allows you to make calls to traditional landline and mobile phones. Go to www.skype.com to learn more about SkypeOut.
- SkypeOut numbers (even local numbers) must be entered in the following format: “00” + “country code” + “area code” + “number”. You can also use “+” or “011” before the country code. For example: “+1 555 555 1234”.
- Use the *a/A button to change to lowercase, uppercase, or numeric entry when entering a contact name and phone number.



- Please note that emergency numbers cannot be called with SkypeOut.

1

2

3

4

5

6

7

8

9

10


11

12


section

2.3 Search for Contacts


To search for contacts, select “Menu”, then:



1. Select “Search”.



2. Enter the Skype name or full name.



3. Select a name.

4. Select “Options” then select “Add to Contacts”.

Notes:

- Other options available during a search include:
 - **More results**—Displays the next 20 names in the list.
 - **Search again**—Repeats the search.
 - **Call**—Calls the selected name.
 - **View profile**—Displays the selected name’s profile.
- You can stop a search at any time by pressing “Stop”.

2.4 Advanced Options

1

2

3

4

5

6

section

7

8


9

10

11

12

Advanced options allow you to perform actions related to your contacts. To use advanced options while in your Contact list, select “Options”, then:



1. Select “Advanced”.



2. Select an option.

Options:

- **Rename** — Changes the name of the contact in your Contact list.
- **Remove** — Removes the contact from your Contact list.
- **Block/Unblock** — Blocks or unblocks the contact. When a contact is blocked, you will always appear offline to him or her and he or she will not be able to contact you.
- **Request Authorization** — Sends a new authorization request to the contact if a previous request was not accepted.
- **Call** — Calls to the selected contact.
- **Send Voicemail** — Connects to the voicemail of the selected contact.

3. Make and Receive Calls


This chapter tells you how to make and receive calls on your phone. It also provides information on using voicemail and call history.

The procedures for making and receiving calls apply to any type of call—Skype-to-Skype calls, directly dialed calls, SkypeOut calls you receive or send, and SkypeIn calls you receive.


3.1 Make a Call to a Contact

To make a Skype or SkypeOut call to a contact, select “Contacts”, then:



1. Select a contact and then press  on the Phone.



2. Wait for the call to connect, ring, and be answered.
3. Press  to end.

Options (during a call):

- **Hold** — Places the call on hold.
- **Mute/Unmute** — Turns the sound off and on.
- **Hang Up** — Ends the call.

Make and Receive Calls

3.2 Dial a Direct Call

1

2

3

4

5

6

7

section

8

9


10


11

12

To call a number directly:



1. Dial the number and then press .

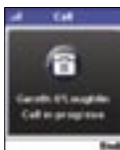

2. Wait for the call to connect, ring, and be answered.

3. Press  to end.

Notes:


- SkypeOut allows you to make calls to traditional landline and mobile phones. Go to www.skype.com to learn more about SkypeOut.
- SkypeOut numbers (even local numbers) must be entered in the following format: “00” + “country code” + “area code” + “number”. You can also use “+” or “011” before the country code. For example: “+1 555 555 1234”.
- Use the *a/A button to change to lowercase, uppercase, or numeric entry when dialing a phone number.


Options (during a call):


- **Hold** — Places the call on hold.
- **Mute/Unmute** — Turns the sound off and on.
- **Hang Up** — Ends the call.

3.3 Receive a Call

When someone calls you, the ringtone sounds and the incoming-call message is displayed. To receive a Skype or SkypeIn call:



1. Press  to receive the call.



2. Press  to end.

Options (during a call):

- **Hold** — Places the call on hold.
- **Mute/Unmute** — Turns the sound off and on.
- **Hang Up** — Ends the call.

3.4 Divert a Call

You can divert calls to another phone or to your voicemail. To divert calls, select “Menu”, then:



1. Select “Settings”.



2. Select “Call divert”.



3. Select “Call forwarding”.



4. Select “Yes”.



5. Enter the number.

1
2
3
4
5
6
7
8
9
10
11
12

section

Make and Receive Calls

Notes:

- You can select the “Forward To” option to change or delete the number you specified in step 5. User can also select this option to forward to another Skype name. Please note that the phone will only “forward” calls when the phone is turned off.
- After you enter a number, the number is saved in the phone’s memory until you change it. This means that you can turn off call forwarding, and when you turn it on again, the number is available to set for forwarding.
- You can choose to forward to a phone number, your voicemail, or both.
- SkypeOut numbers (even local numbers) must be entered in the following format: “00” + “country code” + “area code” + “number”. You can also use “+” or “011” before the country code. For example: “+1 555 555 1234”.
- Use the *a/A button to change to lowercase, uppercase, or numeric entry when dialing a phone number.

3.5 Send Voicemail


You can send voicemail to contacts who have Skype Voicemail™. To send a voicemail, select “Contacts”, then:




1. Select a contact.



2. Select “Options” and then select “Send voicemail”.

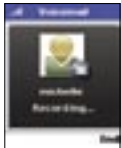

3. Record your voicemail. Select “End” when you have finished.

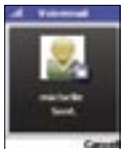

4. After the voicemail is sent, a message is displayed.

1

2

3

4

5

6

7

8

9

10

11

12

section


3.6 Listen to Voicemail

If you have subscribed to a Skype Voicemail™ account, to listen to your voicemail, select “Menu”, then:

1. Select “History”.
2. Select “Voicemail”.
3. Select an available voicemail to which to listen.

3.7 Record a Voicemail Greeting

To record a greeting for your Skype Voicemail™, select “Menu”, then:

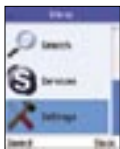

1. Select “Settings”.



2. Select “Call divert”.



3. Record your voicemail greeting.

3.8 History

Your phone stores a history of missed, incoming, and outgoing calls, as well as voicemail and authentications. To view your history, select “Menu”, then:



1. Select “History”.



2. Select the history you want to view.

Note:

- When you are viewing a history, such as missed calls, you can select “Options” to perform actions such as “Call”, “Send voicemail”, “Delete”, and so on.



1

2

3

4

5

6

7

8

9

10

11

12

section


Connect to Networks

4. Connect to Networks

When you power on your phone, it searches for wireless networks in range. This chapter tells you how to manually configure the settings your phone uses to search and connect to wireless networks.

4.1 Wireless Networks

To search for wireless networks, select “Menu”, then:



1. Select “Settings”.



2. Select “Network”.



3. Select “Networks in Range”.



4. Select a network.

Connect to Networks

1

2

3

4

5

6

7

8

section


9

10

11

12

Notes:


- Networks that display the  icon require a network-access key.
- If no networks are found, an error message is displayed. Try changing your location and then search again.
- You can also search for networks from the power-key menu.



“Un-broadcast” or “Hidden” networks can be manually entered by selecting “Add network manually” from the “Options” soft-key menu located at the bottom of the “Select network” list.

4.2 Preferred Networks

To work with your preferred networks, select “Menu”, then:



1. Select “Settings”.



2. Select “Network”.



3. Select “Preferred networks”.



4. Select a network and then select “Options”.


Connect to Networks

Preferred-Network Options:

- **Add current**—Adds the network that is currently connected to your preferred list. This is a good way to add open networks you may frequent.
- **Add network manually**—Adds a new network to your preferred list. You must manually define the network name, security options, and other settings.
- **Move up/to top/down**—Moves the selected preferred network up or down in the list, or to the top of the list.
- **Configure network**—Lists settings for the selected network. You can view settings for the network, including the network name, connection type, network key, IP address, data rate, and other settings. Some settings may be changed.
- **Remove network**—Deletes the selected network from your preferred list.
- **Remove all networks**—Deletes all networks from your preferred list.

4.3 Auto-Connect to Open Networks

You can set the phone to automatically find and connect to open public networks (this is the default setting). Select “Menu”, then:



1. Select “Settings”.



2. Select “Network”.



3. Select "Auto-connect".



4. Select "Yes" to auto-connect. Select "No" to turn off auto-connect.

4.4 Define a New Network

You can manually define a new wireless network to which to connect. Select "Menu", then:



1. Select "Settings".



2. Select "Network".



3. Select "Preferred networks".

1

2

3

4

5

6

7

8

section

9

10

11

12

Personal Settings




4. Select "Options".



5. Select "Add network manually".



6. Enter a network name and press "OK".



7. Configure the settings of the new network.

Personal Settings


5. Personal Settings

This chapter tells you how to define your personal settings, including your personal-profile details, password, privacy settings, and notification settings.


5.1 Profile

Your Skype profile displays details about you that other Skype users can see. While the details in your profile are optional, you may want to define (at least) your country and city details to help confirm your identity.

To set your profile details, select “Menu”, then:



1. Select “Status”.



2. Select “My profile”.



3. Select “Details shown to all”.

1

2

3

4

5

6

7

8

9


10

11

12

section

Personal Settings



4. Select the profile detail you want to change.

Notes:

- Select “Private details” in step 3 to change your email address.
- Use the *a/A button to change to lowercase, uppercase, or numeric entry when entering your profile details.
- Use the left soft key to edit details.



5.2 Change Status

1

2

3

4

5

6

7

8

9


section

10

11

12

You can view and change the status of account-login details that other Skype users can see.

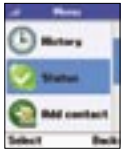








1. Select "Status".



2. Select "Change status".




3. Select from the following account-status options.


Skype Online Status	<p>Indicates your current Skype online status.</p> <ul style="list-style-type: none"> Online Offline (not signed in) Do not Disturb. Indicates you are busy. Skype Me. Available for calls from anyone. Invisible. Still online, but unseen by others. Away. Away for a while. Not available. Not available for calls.
---------------------	---

5.3 Mood Messages

You can view and change your mood-message details that other Skype users can see.



1. Select "Status".



2. Select "Mood message".



3. Enter your preferred mood message.

5.4 Sign Out

1

2

3

4

5

6

7

8

9


section

10


11

12

You can sign out from your Skype account following the procedure below.

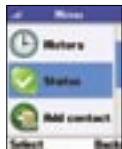

1. Select "Status".

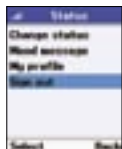


2. Select "Sign out".



3. Click "Sign out".

5.5 Password

To change your password, select “Menu”, then:



1. Select “Settings”.



2. Select “General”.



3. Select “Change password”.



4. Enter your old password.



5. Enter your new password.

Notes:

- Use the *a/A button to change to lowercase, uppercase, or numeric entry when entering your Skype name and password.
- Passwords can be 4–20 characters. You can use any mix of upper- and lowercase characters, numbers, and punctuation marks. You cannot use spaces. Start your name with a number or punctuation mark, or use your Skype name as a password.

5.6 Privacy

Skype not only protects your privacy by showing your online presence only to your contacts, it offers additional privacy settings that allow you to restrict calls to only those that you want to receive.

To change your privacy settings, select “Menu”, then:



1. Select “Settings”.




2. Select “Privacy”.



3. Select “Calls”.

Personal Settings



4. Select a privacy setting.

Note:

- Select “SkypeIn calls” in step 3 to change your privacy settings for SkypeIn calls.

General Settings

6. General Settings

This chapter tells you how to define general phone settings, such as the displayed language, display settings, time, and date. You can display the phone-settings information.

6.1 Language

To change your language settings, select “Menu”, then:



1. Select “Settings”.



2. Select “General”.



3. Select “Language”.



4. Select a language.

1

2

3

4

5

6

7

8

9

10

11

12

section


General Settings

Note:

- After you select a language, a message appears advising that you must power off the Phone and power it back up again for the change to take effect.

6.2 Display

To change your display settings, select “Menu”, then:



1. Select “Settings”.



2. Select “Phone settings”.



3. Select the setting you want to change.



Note:

- Use the navigation key left or right to change the brightness and contrast, or up and down to change the time-out setting.

6.3 Tones

1

2

3

4

5

6

7

8


9

10

11

12

To change the tone settings, select “Menu”, then:

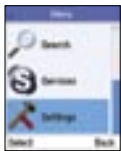

1. Select “Settings”.



2. Select “Tones”.



3. Select a setting.


Tone Settings:

- **Incoming call alert**—Set this as “Ringing”, “Ring once”, “Beep once”, or “Off”.
- **Ringtone**—Select the ringtone from the displayed list.
- **Ring volume**—Set the volume level of the ringing tone. Use the navigation key left or right to change the volume.
- **Vibrating alert**—Select “Always”, “When silent”, or “Never”.
- **Notification tones**—Set this as “Beep”, “Vibrating”, or “Silent”.
- **Keypad tones**—Set this as either “On” or “Off”.

General Settings

6.4 Time and Date


To change the time and date settings, select “Menu”, then:



1. Select “Settings”.



2. Select “Time and Date”.



3. Select the setting you want to change.



Note:

- Use the navigation key left and right or up and down to change the settings.

6.5 Phone Information

1

2

3

4

5

6

7

8

9


10

11

12

section

To display phone information, select “Menu”, then:

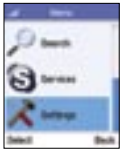

1. Select “Settings”.



2. Select “Information”.



3. Scroll to view information.

Note:

- You can reset all the phone’s settings from the “Settings > General > reset” menu.

Appendix A: Specifications

Battery Life

Use Time: 3 hours

Standby Time: 50 hours

Lilon 3.7V minimum 1100mAh

Physical Size

4.53 x 1.93 x 0.71 in. (115 x 49 x 18mm)

Temperature

Operating: 32° to 104° F (0° to 40° C)

Storage: -4° to 158° F (-20° to 70° C)

Humidity

10% to 85% (non-condensing)

Maximum 802.11b/g Channels

FCC/IC: 1-11

ETSI: 1-13

France: 10-13

MKK: 1-14

Operating Frequency

2.4-2.4835GHz (US, Canada, ETSI)

2.4-2.497GHz (Japan)

Data Rate

802.11g: 6-, 9-, 11-, 12-, 18-, 24-, 36-, 48-, 54Mbps (automatic fallback)

802.11b: 1-, 2-, 5.5-, 11Mbps (automatic fallback)

Modulation Type

802.11g: CCK, BPSK, QPSK, OFDM

802.11b: CCK, BPSK, QPSK

RF Output Power

802.11b: 16 dBm

802.11g: 12 dBm

Antenna Gain

5.5 dBi

Appendix A: Specifications

Emissions

FCC Part 15B Class B

VCCI Class B

EN61000-3-2

EN61000-3-3

Radio-Signal Certification

FCC Part 15C

EN 300-328

EN 301 489-1

EN 301 489-17

ARIB STD-T66

ARIB STD-33

DGT LP0002

Temperature

IEC 68-2-14

Vibration

IEC 68-2-36, IEC 68-2-6

Shock

IEC 68-2-29

Drop

IEC 68-2-32

Safety

UL/cUL (UL 60950-1)

IEC 60950-1 (CB)

Standards

IEEE 802.11b/g

1

2

3

4

5

6

7

8

9

10

11

12

section

Compliances

Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

IMPORTANT NOTE:

FCC Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. End users must follow the specific operating instructions for satisfying RF exposure compliance. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. IEEE 802.11b or 802.11g operation of this product in the USA is firmware-limited to channels 1 through 11.

Japan VCCI Class B

Compliances

EC Conformance Declaration

Marking by the above symbol indicates compliance with the Essential Requirements of the R&TTE Directive of the European Union (1999/5/EC). This equipment meets the following conformance standards:

- EN 60950-1 (IEC 60950-1) - Product Safety
- EN 300 328 - Technical requirements for 2.4GHz radio equipment
- EN 301 489-1, EN 301 489-17 - EMC requirements for radio equipment

This device is intended for use in the following European Community countries: Requirements for indoor vs. outdoor operation, license requirements, and allowed channels of operation apply in some countries as described below:

- In Italy the end-user must apply for a license from the national spectrum authority to operate this device outdoors.
- In Belgium outdoor operation is only permitted using the 2.46–2.4835GHz band: Channel 13.
- In France outdoor operation is only permitted using the 2.4–2.454GHz band: Channels 1–7.
- Austria • Belgium • Denmark
- Finland • France • Germany
- Italy • Luxembourg • Netherlands
- Norway • Spain • Sweden
- Switzerland • United Kingdom • Portugal
- Greece • Ireland • Iceland

1

2

3

4

5

6

7

8

9

10

11

12

section

BELKIN®

Wi-Fi® Phone for Skype™

BELKIN®

www.belkin.com

Belkin Tech Support

US: 800-223-5546, ext. 2263
310-898-1100, ext. 2263

UK: 0845 607 77 87

Australia: 1800 235 546

New Zealand: 0800 235 546

Singapore: 800 616 1790

Europe: www.belkin.com/support

Belkin International, Inc.

501 West Walnut Street
Los Angeles, CA 90220, USA
310-898-1100
310-898-1111 fax

Belkin Ltd.

Express Business Park, Shipton Way
Rushden, NN10 6GL, United Kingdom
+44 (0) 1933 35 2000
+44 (0) 1933 31 2000 fax

Belkin B.V.

Boeing Avenue 333
1119 PH Schiphol-Rijk, The Netherlands
+31 (0) 20 654 7300
+31 (0) 20 654 7349 fax

Belkin Ltd.

4 Pioneer Avenue
Tuggerah Business Park
Tuggerah, NSW 2259, Australia
+61 (0) 2 4350 4600
+61 (0) 2 4350 4700 fax